
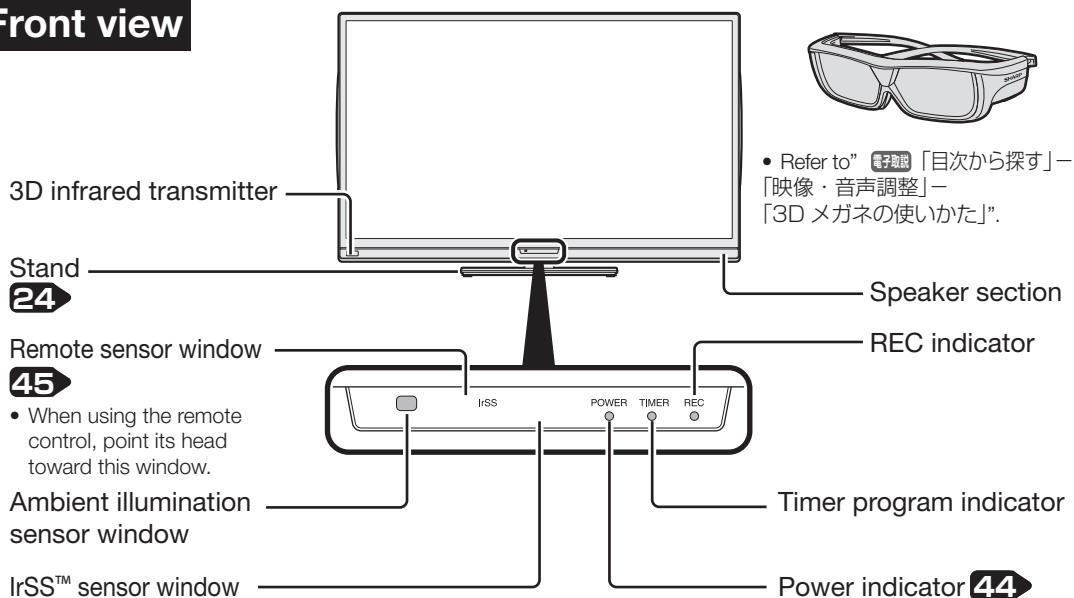


English Guide

Part Names

- The number shown in each  is the page number where the part's function and/or use are explained in Japanese.


Front view




Adjusting the LCD panel angle

- The LCD panel can be rotated horizontally up to 20° clockwise and counter-clockwise.
- Hold the stand firmly when you adjust the monitor's angle.

Right side view

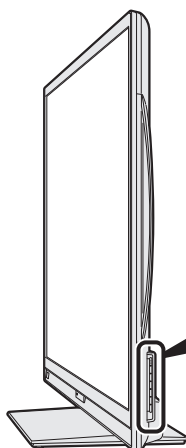


Control panel

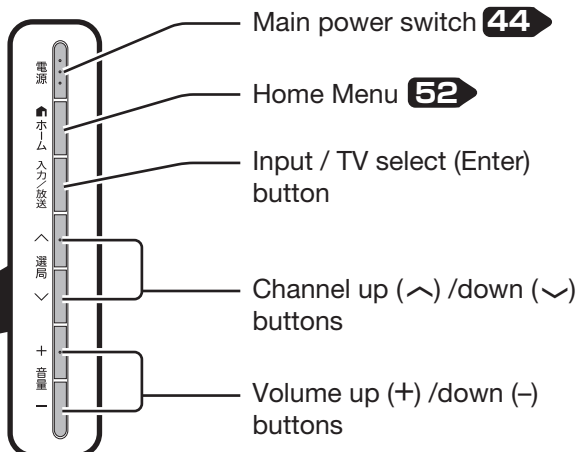

Back view

The illustrations below are those of LC-60L5.

LC-52L5/LC-46L5/LC-40L5 has the same layout of jacks and terminals as LC-60L5.

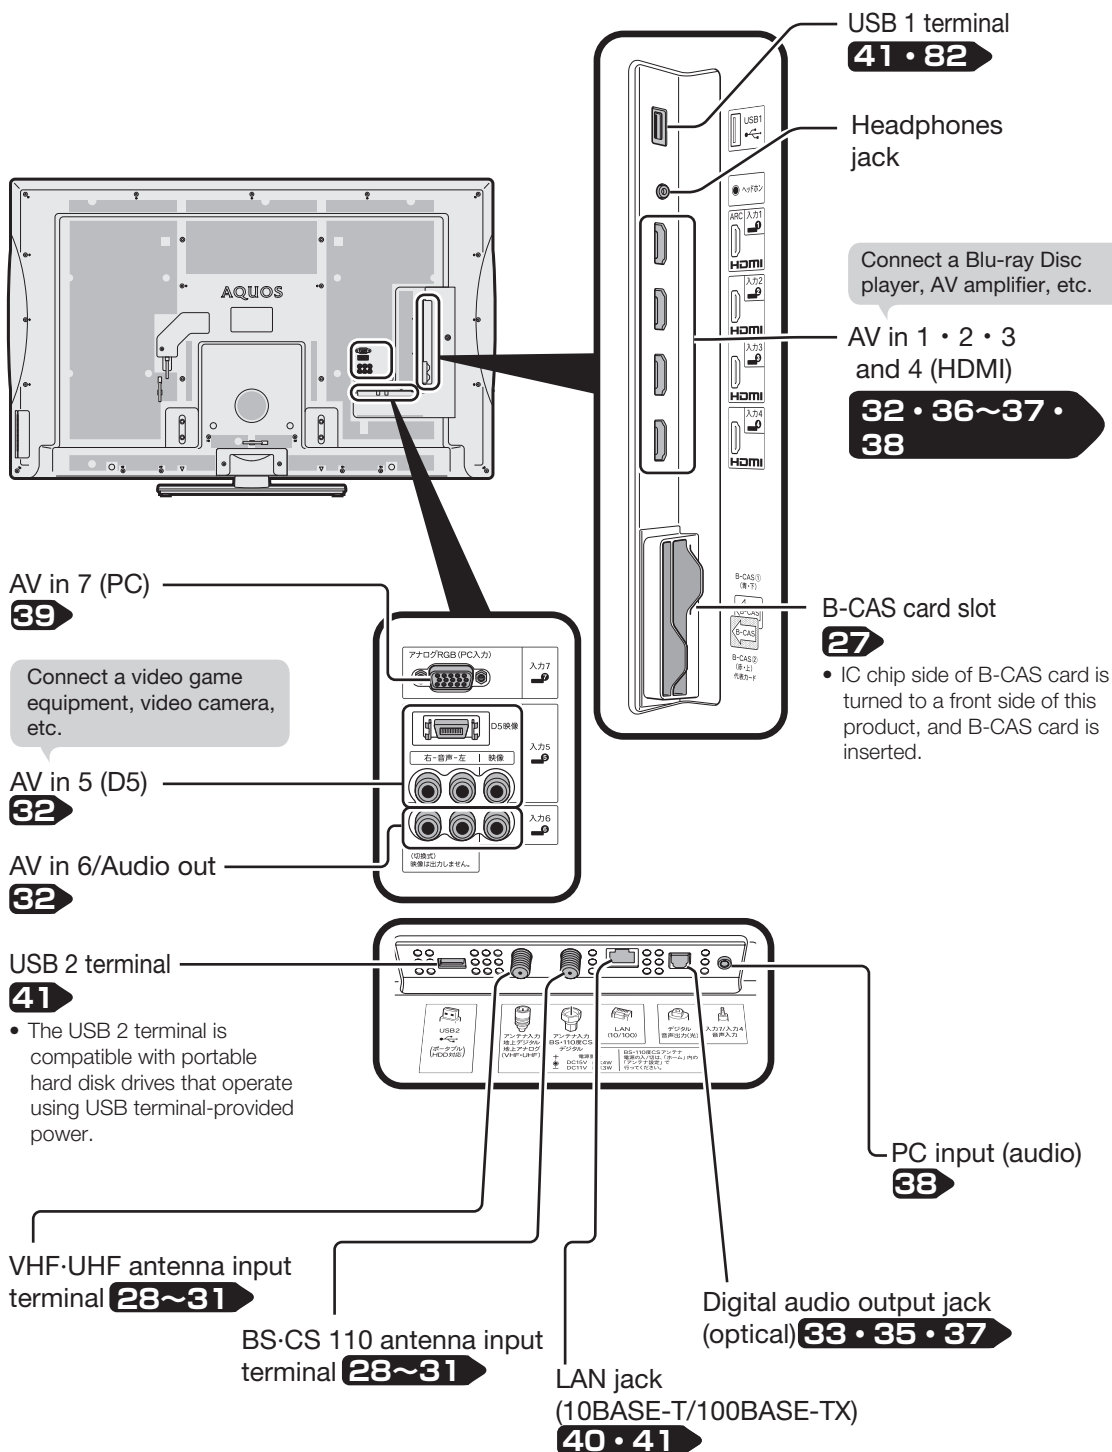

Remote Control Unit

Active/Standby 44

Press to engage the TV set in the active or standby mode.

地上 Terrestrial digital select 51

Terrestrial analog select 51

BS BS select 51

CS CS select 51

When selecting the CS digital channel for the first time. 50

データ連動

d Linked data broadcast 51

Press to call the data broadcast linked with the current digital TV program.

消音 Mute 51

Press to mute audio.

+音量 Volume up (+)/down (-) 51

Press to adjust the volume.

番組表(予約) EPG 51

Press to display or turn off the Electronic Program Guide (EPG: 番組表) when receiving a digital broadcast.

ホーム Display the "Home" Menu 52・53

Press to start some useful operations of the TV.

番組情報

Program info

Press to display detailed information on the current digital program.

Finish

Press to finish menu operation, etc.

録画消去

Delete recording

Press to delete a title recorded on the USB-HDD.

2画面

Split screen

Press to switch between the split screen mode and the normal screen mode.

操作切替

Operable screen

Press to switch the operable screen when the TV set is in the split screen mode.

静止

Freeze

Press to freeze the picture.

3桁入力

Digital channel number input

Use to select a digital channel by entering the 3-digit channel number.

AVポジション

AV mode select

Press to select the picture/sound setting that best matches the current program.

オフタイマー

Sleep timer

Press to select the remaining time period after which the TV set automatically enters the standby mode.

画面表示

Display

Press to display or turn off the channel call, etc.

3D

3D

Press to switch to 3D mode when the TV set receives a 3D signal.

セーブモード

Power saving mode

Select power saving settings.

インフォメーション

Information

Press to display AQUOS information.

Channel select 51

- Press to select a channel.
- Use to input a number for various settings.

インターネット

Internet

Press to connect to the internet.

入通局

Channel up (^)/down (v) 51

Press to select channels in the ascending or descending order.

*CATV channels are factory set to be skipped. 64

入力切替

Input select 51

Press to select the input.

Display the Tool Menu 52・53

Cursor (up, down, left, right) 52・53

Use to select a menu item, column, etc.

決定

Enter/Confirm 52・53

Press to confirm a selected setting or menu item.

Return 52

Press to go back to the previous screen.

青 赤 緑 黄

Color

Use to operate EPGs and data program screens.

Familink

Press to operate "Familink" Recorders and AQUOS Audio connected via HDMI cables.

音声切替

Audio select

Press to select the audio.

取扱説明

Operation guide 54

Press to display the operation guide.

字幕

Caption

Press to display, select, or turn off captions when watching a digital program with captions.

常連番組

Recommended programs select

Press to select a program which the TV set recommends.


To open the cover

Hold the cover by the projections on both sides and lift upwards.

Switching the Display Language to English ホームメニューなどの言語を英語にする

- Using the Home menu screen, you can switch the on-screen display language to English.

ホームメニューなどの画面表示を英語にすることができます。

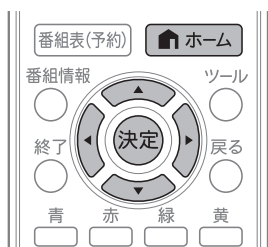

◇おしらせ◇

誤ってホームメニューを英語にしてしまったときは

- ホームメニューから「Setup」-「 (View Setting)」-「言語 (Language)」を選んで決定し、「日本語」を選んで決定すると日本語になります。

1

Press

ホーム

and
select
with



Select “設定” (Setup) on the Home menu.

ホームメニューから「設定」を選ぶ



2

Select
with



Select “ (視聴準備)” (View Setting).

「 (視聴準備)」を選ぶ



3


Select
with



and
press



Select “Language(言語)”.
「Language(言語)」を選ぶ

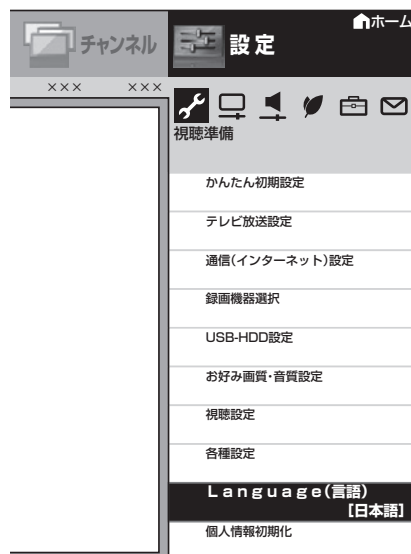

4

Select
with



and
press



Select “English”.
「English」を選ぶ

Enter.
決定する



5

Press

ホーム

Finish this operation.
終了する

- The menu screen is now displayed in English.
- 画面表示が英語になります